















Programming the ZB-8110 Bar Code Scanner

for use with

Martial Arts Organizer 4

Before you can begin to use the ZB-8110 Bar Code scanner with Martial Arts Organizer, you must first program the scanner.

- This scanner **MUST** be connected directly to one of your computers USB ports. Do not connect the scanner to a USB hub or a USB port on a keyboard.
- Connect the scanner, and allow your computer's Plug and Play software to recognize it.
- Program the scanner: Starting at the first column, squeeze the trigger to scan the PROGRAM bar code.
You will hear an ascending whistle and the light will come on and flicker softly.
- Squeeze the trigger to scan each bar code.
- Scan each column of bar codes in order from top to bottom.
- A beep indicates a successful scan.
- Scan slowly. Moving too quickly from one bar code to the next may cause errors.
- Do not proceed unless you hear a beep.
Try moving the scanner away from, then closer to the page.
- When you scan Exit you'll hear a descending whistle and the light will go off.

Reset Scanner REQUIRED	Select USB Interface USB Only	Set the Minimum Number of Bar Code characters REQUIRED
 Program  Reset	 Program  Interface  0  30  Finish  Exit	 Program  Global Min  0  2  Finish  Exit